

































Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|------------------------|
| Bright- Sys |  | Down |
| Bright+ Mode |  | Up |
| 4 |  | 4 |
| Color- S.Std |  | Sound / Title |
| Tune+ |  | >> / Tune+ |
| Tune- |  | <<< / Tune- |
| Search |  | Red / Netflix / Search |
| Color+ P.Std |  | Picture / Format |
| 2.Fav P/C 2. |  | Fav / Marker / PC |
| 0/10 |  | 0 |
| Guide -/-- 1. |  | Guide / EPG / -/-- |
| 9 |  | 9 |
| 8 |  | 8 |
| 7 |  | 7 |
| 6 |  | 6 |
| 5 |  | 5 |
| On/Off |  | Power |

Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|-----------------------|
| 3 |  | 3 |
| 2 |  | 2 |
| 1 |  | 1 |
| Menu audio |  | Audio / Lang I/II |
| Volume- |  | Vol- |
| Volume+ |  | Vol+ |
| Menu Off |  | Exit / Cancel / Clear |
| Menu Right |  | Right |
| OK Enter |  | OK |
| Menu Left |  | Left |
| Menu |  | Menu / Home |
| TV/AV |  | AV / Input / RDS |
| Menu video |  | D.Menu / Top |
| Subt.List |  | Subtitle / EQ |
| Mute |  | Mute / Dimmer |
| | | |
| | | |

