











Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	[+]		Shift + Picture / Format
	Sound		Sound / Title
	Pic		Picture / Format
	Guide		Guide / EPG / -/--
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Fav / Marker / PC
	Sub		Subtitle / EQ
	Text		Text / Goto
	Mix		Shift + Text /
	Size		Zoom / Size
	Hold		Shift + Stop /
	TIP		D.Menu / Top
	Sub.P		Eject / Surround
	Index		Display / Media
	Info		Info / Angle
	FAV		Shift + Fav / Marker / PC
	TV / R		TV/Radio /
	Audio		Audio / Lang I/II
	Menu		Menu / Home
	Up		Up
	Input		AV / Input / RDS
	Left		Left



