





























**Originalfernbedienung Ersatzfernbedienung**

|                      |   |                        |
|----------------------|---|------------------------|
| Index / Text Subcode |    | D.Menu / Top           |
| TV Moni              |    | Smart / List           |
| Zero Return          |    | Green / APP / Repeat   |
| 00:00:00             |    | Red / Netflix / Search |
| Pause / > <          |    | Pause / Step / Freeze  |
| 0 / AV               |    | AV / Input / RDS       |
| 0 / AV               |    | 0                      |
| Trk+                 |    | CH+ / Page+            |
| Trk-                 |    | CH- / Page-            |
| Left / <<            |   | Left                   |
| Left / <<<           |  | <<< / Tune-            |
| Right / >>>          |  | >>> / Tune+            |
| Right / >>           |  | Right                  |
| Down / Stop          |  | Stop / Hold            |
| Down / Stop          |  | Down                   |
| Enter / Text Hold    |  | Shift + Stop /         |
| Cancel / Text Size   |  | Zoom / Size            |

**Originalfernbedienung Ersatzfernbedienung**

|                    |   |                       |
|--------------------|---|-----------------------|
| Cancel / Text Size |    | Exit / Cancel / Clear |
| ATR / Text Reveal  |    | Display / Media       |
| Enter / Text Hold  |    | OK                    |
| Up / Play          |    | Play / Slow           |
| Timer Rec          |    | Shift + Sleep / Timer |
| Rec / OTR          |    | Rec / Rec Mode        |
| Up / Play          |    | Up                    |
| Menu               |    | Menu / Home           |
| Program            |    | TV/Radio /            |
| Text / Mix         |   | Text / Goto           |
| 8                  |  | 8                     |
| Timer              |  | Sleep / Timer         |
| Eject              |  | Eject / Surround      |
| 1                  |  | 1                     |
| 2                  |  | 2                     |
| 3                  |  | 3                     |
| 4                  |  | 4                     |



