

















 






Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	Muting/-20dB		Mute / Dimmer
	Volume Down		Vol-
	Volume Up		Vol+
	< Start Turntable		Menu / Home
	Stop Turntable		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play/Pause CD		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Stop CD		Stop / Hold
	I<< Skip/Search		I<< / Preset-
	Skip/Search >>I		>>I / Preset+
	Deck A/B		Yellow / YouTube / Repeat
	EQ On/Flat		Smart / List
	EQ On/Flat		Subtitle / EQ
	EQ Preset		Display / Media
	< Play Tape		Left
	Play > Tape		Right
	Stop Tape		OK
	Auto Rec Mute		Up
	<< Tape		<< / Tune-
	>> Tape		>> / Tune+
	Pause Tape		Down
	Rec Tape		Rec / Rec Mode

