


















Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
Text		Text / Goto
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
TV	 Shift + 1		
Video	 Shift + 4		
Epg	 Shift + Guide / EPG / -/-		
TV/SAT	 Shift + 0		
App	 Shift + Green / APP / APP /		

