
















 








 



 



































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Smart Tv		Smart / List
	0		0
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Info		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Option		Setup / OPT /
	P-		CH- / Page-
	TV		TV/Radio /
	Audio		Audio / Lang I/II
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	List		Shift + Smart / List



