



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute/On		Mute / Dimmer
	A		Shift + Red / Netflix /
	B		Shift + Green / APP /
	C		Shift + Yellow / YouTube /
	D		Shift + Blue / Prime
	Game		Display / Media
	AUX		Shift + 7
	AUX		Smart / List
	[i]		Info / Angle
	TXT		Text / Goto
	Tv/R		TV/Radio /
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Esc		Exit / Cancel / Clear
	Down		Down
	CH-		CH- / Page-
	Sound/[v]		Audio / Lang I/II
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
↶	Recall	RETURN BACK	Back / Return
0	0	HDMI - BAT 0	0
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

