





 

 
 



 



 













 



 

 

 







 



 





 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	Setup		Setup / OPT /
	N/P		Picture / Format
	DVD/DVB/Card		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	PBC		Smart / List
	Title		Sound / Title
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Search		Shift + Red / Netflix /
	Mark		Fav / Marker / PC
	Program		Shift + TV/Radio / Program
	Zoom		Zoom / Size
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Vol+		Vol+



