


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject / Surround
	Language		Audio / Lang I/II
	1		1
	2		2
	3		3
	Angle		Info / Angle
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Prog		TV/Radio /
	0/10		0
	10+		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Time		Sleep / Timer
	<< Rev		<< / Tune-
	>> Fwd		>> / Tune+
	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Title		Sound / Title
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	PBC		Picture / Format
	Vol -		Vol-
	Vol +		Vol+
	Zoom		Zoom / Size





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Return		Back / Return
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Step		Pause / Step / Freeze
	Slow	+	Shift + Play /
	P-Scan		Fav / Marker / PC
	N/P		AV / Input / RDS
	L/R		Text / Goto
	Mute		Mute / Dimmer
	Display		Display / Media
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	Default		Smart / List

