

 











 














Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Display		Display / Media
	Counter Reset		Exit / Cancel / Clear
	Counter		Menu / Home
	Monitor		Smart / List
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Rec Stop		Sound / Title
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	CD Pause		OK
	CD I<<		Left
	CD >>I		Right

Originalfernbedienung Ersatzfernbedienung

	Stop CD		Shift + Stop /
	Start CD Synchro		Shift + Play /
	Standby CD		Power

