












**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up / Volume+		Up
	Up / Volume+		Vol+
	Left / Track-		I<< / Preset-
	Left / Track-		Left
	Right / Track+		>>I / Preset+
	Right / Track+		Right

**Originalfernbedienung Ersatzfernbedienung**

	Down / Volume-		Vol-
	Down / Volume-		Down
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

