

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	Up/CH+		Up
	Exit		Exit / Cancel / Clear
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Pg Up		CH+ / Page+
	Down/CH-		Down
	Pg Dn		CH- / Page-
	TV/Radio		TV/Radio /
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	TTX		Text / Goto
	Timer		Guide / EPG / -/-
	List		Smart / List
	Pause		Pause / Step / Freeze
	Sleep		Sleep / Timer





Originalfernbedienung

Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Ratio		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung

Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

