





























 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Standby |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | EPG |  | Guide / EPG / -/-- |
|  | Info |  | Info / Angle |
|  | TTX |  | Text / Goto |
|  | Audio |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | Menu |  | Menu / Home |
|  | Up / CH+ |  | CH+ / Page+ |
|  | Up / CH+ |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left / Vol- |  | Vol- |
|  | Left / Vol- |  | Left |
|  | OK |  | OK |
|  | Right / Vol+ |  | Vol+ |
|  | Right / Vol+ |  | Right |
|  | Favourite |  | Fav / Marker / PC |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|----------------|
|  | Down / CH- |  | CH- / Page- |
|  | Down / CH- |  | Down |
|  | TV/Radio |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Recall |  | Back / Return |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Goto |  | Shift + Text / |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Rev |  | << / Tune- |
|  | Fwd |  | >> / Tune+ |



