



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Loudness / Page Down		CH- / Page-
	Page Up / PTY		CH+ / Page+
	Set Up		Setup / OPT /
	Sound		Sound / Title
	Listen Mode		Smart / List















Originalfernbedienung Ersatzfernbedienung

	RDS Display		Display / Media
	Left / P.Call- / I<<		I<< / Preset-
	Up		Up
	Right / P.Call+ / >>I		>>I / Preset+
	Down		Down
	<< / Tuning-		<< / Tune-
	>> / Tuning+		>> / Tune+
	Play Reverse		Left
	Play/Pause / Band		Play / Slow
	Bass Boost		Audio / Lang I/II
	A/B +100 Disc		Fav / Marker / PC
	Auto / Stop		Stop / Hold
	DVD/6CH		Shift + 2
	PHONO		Shift + 1
	CD/DVD		Shift + 3
	Tuner		Shift + 6
	MD/Tape		Shift + 5





**Originalfernbedienung    Ersatzfernbedienung**

	Video1		Shift + 4
	Video 2		Shift + 8
	Cinema EQ		Subtitle / EQ
	Tone		Eject / Surround
	Mute		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+

**Originalfernbedienung    Ersatzfernbedienung**

 




 























Originalfernbedienung Ersatzfernbedienung

	DVD Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Menu		Menu / Home
	OSD		Display / Media
	Return		Back / Return
	Top Menu		D.Menu / Top
	Left/ <<		<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Right/>>>		>>  / Preset+
	Down		Down
	<< Tuning		<< / Tune-
	>> Tuning		>> / Tune+
	Enter		OK
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+

