













 
 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/Radio		TV/Radio /
	0		0
	Recall		Back / Return
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	Menu		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Play		Play / Slow
	Down		Down
	Audio		Audio / Lang I/II
	Pause		Pause / Step / Freeze
	FAV		Fav / Marker / PC
	Red/Zoom		Red / Netflix / Search
	Green/9 Pic.		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	Sub-T		Subtitle / EQ



Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
TEXT	<div style="border: 1px solid black; padding: 2px;">GOTO TEXT</div>
	Text / Goto

Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

