



Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	+	Shift + Sleep / Timer
SLEEP	Sleep		Sleep / Timer
MONO TUNER	Mono Tuner		Display / Media
CLOCK	Clock		Setup / OPT /
CD EDIT/CHECK	CD Edit/Check		Smart / List
PRGM	PRGM		TV/Radio /
RANDOM/REPEAT	Random/Repeat	+	Shift + Green / APP /
RANDOM/REPEAT	Random/Repeat	+	Shift + Blue / Prime
1	1		1
2	2		2
3	3		3
DECK1/2 TAPE	Tape/Deck1/2		Red / Netflix / Search
4	4		4
5	5		5
6	6		6
BAND TUNER	Tuner/Band		Green / APP / Repeat
7	7		7

Originalfernbedienung Ersatzfernbedienung

8	8		8
9	9		9
AUX VIDEO	Video/AUX		Yellow / YouTube / Repeat
0	0		0
+10	+10		Guide / EPG / -/-
CD	CD		Blue / Prime Video / Random
	Disc Direct Play 1	+	Shift + 1
	Disc Direct Play 2	+	Shift + 2
	Disc Direct Play 3	+	Shift + 3
	Disc Direct Play 4	+	Shift + 4
	Disc Direct Play 5	+	Shift + 5
	Disc Direct Play 6	+	Shift + 6
	Disc Direct Play 7	+	Shift + 7
SURROUND	Surround	+	Shift + Eject / Surround
MANUAL SELECT	Manual Select		OK
DOLBY PRO LOGIC	Dolby Pro Logic		Sound / Title
T-BASS	T-Bass		Audio / Lang I/II







Originalfernbedienung Ersatzfernbedienung

	GEQ		Subtitle / EQ
	Karaoke		Info / Angle
	Open/Close		Eject / Surround
	Rec/Rec Mute		Rec / Rec Mode
	Play / Up /		Play / Slow
	Play / Up /		Shift + >>1 / Preset+
	Play / Up /		Up
	Vol+		Vol+
	Pause / Set		Pause / Step / Freeze
	<< / I<< / Left / Tuning Down		Left
	<< / I<< / Left / Tuning Down		<< / Tune-
	<< / I<< / Left / Tuning Down		I<< / Preset-
	<< / I<< / Left / Tuning Down		Shift + << /
	>> / >>I / Right / Tuning Up		Right
	>> / >>I / Right / Tuning Up		>> / Tune+
	>> / >>I / Right / Tuning Up		>>I / Preset+
	>> / >>I / Right / Tuning Up		Shift + >> /

Tune+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Power		Power
	Stop / Down / Clear / Preset-		Down
	Stop / Down / Clear / Preset-		Stop / Hold
	Stop / Down / Clear / Preset-		Shift + I<< / Preset-
	Stop / Down / Clear / Preset-		Exit / Cancel / Clear

