


Originalfernbedienung Ersatzfernbedienung

	Power TV	 + 	Shift + Power
	Power PC		Power
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	Start (Windows)		Smart / List
	Back		Back / Return
	i More		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Volume+		Vol+
	Mute		Mute / Dimmer
	Volume-		Vol-
	CH/PG+		CH+ / Page+
	CH/PG-		CH- / Page-
	Recorded TV		Display / Media
	Guide		Guide / EPG / -/-
	Live TV		AV / Input / RDS
	Live TV		TV/Radio /
	Format / DVD		D.Menu / Top
	Format / DVD		Picture / Format
	Format / DVD		Menu / Home
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung

Ersatzfernbedienung

5 JKL	5	5 TAPE	5
6 MNO	6	6 TUNER	6
7 PQRS	7	7 AUX - HDD	7
8 TUV	8	8 USB	8
9 WXYZ	9	9 BLUETOOTH	9
*	*	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
0	0	0 HDMI - SAT	0
#	#	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
CLEAR	Clear	EXIT CANCEL	Exit / Cancel / Clear
[T]	[T] Teletext	GOTO TEXT	Text / Goto
ENTER	Enter	PC FAV MARKER	Fav / Marker / PC
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung

Ersatzfernbedienung

