






 
 



 
 
























 










Originalfernbedienung	Ersatzfernbedienung		
	Power		Power
	Auto Setup		Setup / OPT /
	Computer 1		Fav / Marker / PC
	Computer 1		Red / Netflix / Search
	Computer 1		1
	Computer 2		2
	Computer 2		Green / APP / Repeat
	HDMI		0
	HDMI		Blue / Prime Video / Random
	Video		4
	Video		Yellow / YouTube / Repeat
	Memory Viewer/USB		Display / Media
	Memory Viewer/USB		8
	Up		Up
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung	Ersatzfernbedienung		
	Down		Down
	Menu		Menu / Home
	Aspect		Zoom / Size
	Keystone		Text / Goto
	Info		Info / Angle
	Freeze		Pause / Step / Freeze
	AV Mute		Shift + Mute / Dimmer
	P.Timer		Sleep / Timer
	Lamp		Smart / List
	D.Zoom+		CH+ / Page+
	Vol+		Vol+
	Image		Picture / Format
	Daylight View		D.Menu / Top
	D.Zoom-		CH- / Page-
	Vol-		Vol-
	Mute		Mute / Dimmer

