 















 










 


 








 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Fav		Fav / Marker / PC
	0		0
	Back		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Source		AV / Input / RDS
	EPG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	P.Size		Zoom / Size
	CH+		CH+ / Page+
	Fav+		Shift + Up
	Vol+		Vol+
	CH-		CH- / Page-
	Fav-		Shift + Down
	Vol-		Vol-
	Display		Display / Media





Originalfernbedienung Ersatzfernbedienung

	Auto		Setup / OPT /
	Sleep		Sleep / Timer
	S.Title		Subtitle / EQ
	Freeze		Pause / Step / Freeze
	Text		Text / Goto
	Index		Info / Angle
	Nicam		Shift + Audio / Lang I/II
	Radio		TV/Radio /
	Hold		Shift + Stop /
	I<<		I<< / Preset-
	Size		Shift + Zoom /
	>>I		>>I / Preset+
	S.Page		Shift + Subtitle / EQ
	<<		<< / Tune-
	Reveal		Eject / Surround
	>>		>> / Tune+
	Usb / Media		Shift + Display / Media

Originalfernbedienung Ersatzfernbedienung

	Usb / Media		Shift + 8
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red / Goto		Shift + Text /
	Red / Goto		Red / Netflix / Search
	Green / Slow		Green / APP / Repeat
	Green / Slow		Shift + Play /
	Yellow / Repeat		Shift + Green / APP /
	Yellow / Repeat		Yellow / YouTube / Repeat
	Blue / A-B		Blue / Prime Video / Random
	Blue / A-B		Shift + Yellow / YouTube /

