

















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Audio Dub		Audio / Lang I/II
Auto/Track		Subtitle / EQ
Eject/Reverse		Eject / Surround
F.Adv		Picture / Format
Sp/Lp/Speed		Zoom / Size
Encode		Sleep / Timer
Progr/C/CH		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

Syst.		D.Menu / Top
Vps/Pdc		Setup / OPT /
Store		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
VCR/TV		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear 00:00		Exit / Cancel / Clear
Menu Down		Down
Show View		Smart / List
Slow/Dpss+		CH+ / Page+
Display		Display / Media
Slow/Dpss-		CH- / Page-
1		1



