





 































Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Power Audio		Red / Netflix / Search
	Power TV		Blue / Prime Video / Random
	Power VCR		Shift + Red / Netflix /
	Power VDP		Yellow / YouTube / Repeat
	Power CD		Green / APP / Repeat
	Power TAPE		Shift + Green / APP /
	TUNER		Shift + 6
	CD		Shift + 3
	TAPE		Shift + 5
	TV		Shift + 1
	VDP / VDP 6CH		Shift + 2
	VCR 1		Shift + 4
	VCR 2		Shift + 7
	CH Level-		CH- / Page-
	CH Level+		CH+ / Page+
	Surround		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3 Stereo		Audio / Lang I/II
	Test		Text / Goto
	CH Select		Setup / OPT /
	Help		Info / Angle
	Disc		Smart / List
	Disc Enter		Display / Media
	TV / AV		AV / Input / RDS
	TUNER 1		1
	TUNER 2		2
	TUNER 3		3
	Direct Tuning		Menu / Home
	TV Vol+		Shift + Vol+
	TUNER 4		4
	TUNER 5		5
	TUNER 6		6
	TUNER ≥=10		Guide / EPG / -/-
	TV Vol-		Shift + Vol-





Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Power Audio		Red / Netflix / Search
	Power TV		Blue / Prime Video / Random
	Power VCR		Shift + Red / Netflix /
	Power VDP		Yellow / YouTube / Repeat
	Power CD		Green / APP / Repeat
	Power TAPE		Shift + Green / APP /
	TUNER		Shift + 6
	CD		Shift + 3
	TAPE		Shift + 5
	TV		Shift + 1
	VDP / VDP 6CH		Shift + 2
	VCR1		Shift + 4
	VCR 2		Shift + 7
	CH Level-		CH- / Page-
	CH Level+		CH+ / Page+
	Surround		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3 Stereo		Audio / Lang I/II
	Test		Text / Goto
	CH Select		Setup / OPT /
	Help		Info / Angle
	Disc		Smart / List
	Disc Enter		Display / Media
	TV / AV		AV / Input / RDS
	CD 1		1
	CD 2		2
	CD 3		3
	Direct Tuning		Menu / Home
	TV Vol+		Shift + Vol+
	CD 4		4
	CD 5		5
	CD 6		6
	CD ≥=10		Guide / EPG / -/-
	TV Vol-		Shift + Vol-





 

















Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Power Audio		Red / Netflix / Search
	Power TV		Blue / Prime Video / Random
	Power VCR		Shift + Red / Netflix /
	Power VDP		Yellow / YouTube / Repeat
	Power CD		Green / APP / Repeat
	Power TAPE		Shift + Green / APP /
	TUNER		Shift + 6
	CD		Shift + 3
	TAPE		Shift + 5
	TV		Shift + 1
	VDP / VDP 6CH		Shift + 2
	VCR1		Shift + 4
	VCR 2		Shift + 7
	CH Level-		CH- / Page-
	CH Level+		CH+ / Page+
	Surround		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3 Stereo		Audio / Lang I/II
	Test		Text / Goto
	CH Select		Setup / OPT /
	Help		Info / Angle
	Disc		Smart / List
	Disc Enter		Display / Media
	TV / AV		AV / Input / RDS
	VDP 1		1
	VDP 2		2
	VDP 3		3
	Direct Tuning		Menu / Home
	TV Vol+		Shift + Vol+
	VDP 4		4
	VDP 5		5
	VDP 6		6
	VDP ≥=10		Guide / EPG / -/-
	TV Vol-		Shift + Vol-





Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Power Audio		Red / Netflix / Search
	Power TV		Blue / Prime Video / Random
	Power VCR		Shift + Red / Netflix /
	Power VDP		Yellow / YouTube / Repeat
	Power CD		Green / APP / Repeat
	Power TAPE		Shift + Green / APP /
	TUNER		Shift + 6
	CD		Shift + 3
	TAPE		Shift + 5
	TV		Shift + 1
	VDP / VDP 6CH		Shift + 2
	VCR1		Shift + 4
	VCR 2		Shift + 7
	CH Level-		CH- / Page-
	CH Level+		CH+ / Page+
	Surround		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3 Stereo		Audio / Lang I/II
	Test		Text / Goto
	CH Select		Setup / OPT /
	Help		Info / Angle
	Disc		Smart / List
	Disc Enter		Display / Media
	TV / AV		AV / Input / RDS
	VCR 1 1		1
	VCR 1 2		2
	VCR 1 3		3
	Direct Tuning		Menu / Home
	TV Vol+		Shift + Vol+
	VCR 1 4		4
	VCR 1 5		5
	VCR 1 6		6
	VCR 1 ≥=10		Guide / EPG / -/-
	TV Vol-		Shift + Vol-



