


**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I / II
	Mute		Mute / Dimmer
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Menu		Menu / Home
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-

**Originalfernbedienung    Ersatzfernbedienung**

	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Record		Rec / Rec Mode
	Down / CH-		CH- / Page-
	Down / CH-		Down
	Timeshift		Sleep / Timer
	1		1
	2		2
	3		3
	--		Guide / EPG / -/-
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8





**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	--		Fav / Marker / PC
	Device		Smart / List
	File		Display / Media
	Repeat	+	Shift + Green / APP / REPEAT
	Teletext		Text / Goto
	Mosaic		Picture / Format
	TV/Radio		TV/Radio /
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

**Originalfernbedienung    Ersatzfernbedienung**


