



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	P/N		Smart / List
	Mute		Mute / Dimmer
	Eject		Eject / Surround
	Prog		TV/Radio /
	1		1
	2		2
	3		3
	Search		Red / Netflix / Search
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	PBC		D.Menu / Top
	Setup		Setup / OPT /
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	Menu		Menu / Home
	Channel		Text / Goto
	Language		Audio / Lang I/II
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	Mark		Fav / Marker / PC



