 






 

 

























 



 
 




 

 
 
 
 


















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Setup		Setup / OPT /
	Angle		Info / Angle
	Random		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	Language		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Title		Sound / Title
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Search		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Vol+		Vol+
	I<<		I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	Vol-		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	Resume		Smart / List
	Subtitle		Subtitle / EQ
	Slow		Shift + Play /
	Program		TV/Radio /
	Vocal-Assist		Picture / Format
	PBC		D.Menu / Top
	Mute		Mute / Dimmer
	P/I		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

