

 


 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer


 


 
 
Originalfernbedienung Ersatzfernbedienung

	Nicam		Audio / Lang I/II
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	List		Smart / List
	FAV/List		Fav / Marker / PC
	CH-		CH- / Page-
	Tv/Radio		TV/Radio /





Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	Aspect		Shift + Picture / Format
	Freeze		Pause / Step / Freeze
	Index		Info / Angle
	Cancel		Shift + Exit / Cancel / Clear
	Subpage		Subtitle / EQ
	Text		Text / Goto
	Reveal		D.Menu / Top
	Size		Zoom / Size
	Hold		Stop / Hold
	Mix		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

