







































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red / M		Red / Netflix / Search
	Red / M		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Up		CH+ / Page+
	Left		Left
	Left		Vol-
	i		Info / Angle
	i		OK
	Right		Right
	Right		Vol+
	Down		Down
	Down		CH- / Page-
	TV		AV / Input / RDS
	TV		Shift + 1
	Ideal		Smart / List
	Text		Text / Goto
	UPD		Display / Media
	Prog		TV/Radio /
	Mute		Mute / Dimmer

