



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Timer REC		Shift + Rec / Rec Mode
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Channel		CH+ / Page+
	0/AV		0
	TV/VCR		TV/Radio /
	Channel Tracking-		CH- / Page-
	Speed/SP/LP		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	Call		Sound / Title
	REC/OTR		Rec / Rec Mode
	Play/Slow+		Play / Slow
	Pause/Still		Pause / Step / Freeze
	<</<		<< / Tune-
	>>/>		>> / Tune+
	Program		D.Menu / Top
	Stop/Slow-		Stop / Hold
	Enter		OK
	Menu		Menu / Home
	Cancel		Exit / Cancel / Clear
	Index		Smart / List
	ATR		Display / Media
	Clock/Counter		Sleep / Timer
	Zero/Return		Back / Return
	Counter/Reset		Picture / Format
	Audio Select		Audio / Lang I/II

