



**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	TV/Radio		TV/Radio /
	Guide		Guide / EPG / -/--
	Fav		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0 / Swap		0
	0 / Swap		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	i		Info / Angle
	Vol+		Vol+
	OK		OK
	CH+		CH+ / Page+
	Up		Up
	Left		Left
	Right		Right
	Vol-		Vol-
	Down		Down
	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / I<< / Instant Replay		<< / Tune-
	<< / I<< / Instant Replay		I<< / Preset-




**Originalfernbedienung   Ersatzfernbedienung**

	Play / Pause		Play / Slow
	>> / >>		>> / Tune+
	>> / >>		>>  / Preset+
	Library		Display / Media
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Text		Text / Goto
	Personal Planner		Smart / List
	Sub / Audio		Audio / Lang I/II
	Sub / Audio		Subtitle / EQ
	History		D.Menu / Top
	PIP		Picture / Format
	PIP Swap		Zoom / Size
	PIP Position		Setup / OPT /
	Sleep Timer		Sleep / Timer

**Originalfernbedienung   Ersatzfernbedienung**


