

 

















 



















 





 







 
 
 















Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	Scanner On/Off		TV/Radio /
	Transmit		Setup / OPT /
	Pause/Still		Pause / Step / Freeze
	Stop		Stop / Hold
	Still Adv		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	-		Left
	Search		Red / Netflix / Search
	+		Right
	Display		Display / Media
	Reset		Back / Return
	Zero Stop		Exit / Cancel / Clear
	AV Link		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Input Select		Smart / List
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	Tracking/V-Lock-		CH- / Page-
	Tracking/V-Lock+		CH+ / Page+
	Repeat		Green / APP / Repeat
	Skip		Blue / Prime Video / Random
	Audio Out		Mute / Dimmer
	Tape Select		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Recording LP/SP		Picture / Format
	7		7





Originalfernbedienung Ersatzfernbedienung



 

















 













SU-SA 8	8	USB 8	8
MO-SA 9	9	BLUETOOTH 9	9
MO-FR 0	0	HDMI - BAT 0	0
	-/--	GUIDE EPG	Guide / EPG / -/--
	Timer Rec	GOTO TEXT	Text / Goto

Originalfernbedienung Ersatzfernbedienung







 





 







 
 
 















Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	Scanner On/Of		TV/Radio /
	Transmit		Setup / OPT /
	Pause/Still		Pause / Step / Freeze
	Stop		Stop / Hold
	Still Adv		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	-		Left
	Search		Red / Netflix / Search
	+		Right
	Display		Display / Media
	Reset		Back / Return
	Zero Stop		Exit / Cancel / Clear
	AV Link		AV / Input / RDS











Originalfernbedienung Ersatzfernbedienung

	Input Select		Smart / List
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	Tracking/V-Lock-		CH- / Page-
	Tracking/V-Lock+		CH+ / Page+
	Repeat		Green / APP / Repeat
	Skip		Blue / Prime Video / Random
	Audio Out		Mute / Dimmer
	Tape Select		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Recording LP/SP		Picture / Format
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Timer Rec		Text / Goto

Originalfernbedienung Ersatzfernbedienung

