



















 

 



 

 

 

 



 

 

 





 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------------------------|
|  | Standby |  | Power |
|  | DVD |  | Shift + 2 |
|  | Tuner |  | Shift + 6 |
|  | AUX |  | Shift + 7 |
|  | Subtitle |  | Subtitle / EQ |
|  | Language |  | Shift + Audio / Lang I/II |
|  | Title |  | Sound / Title |
|  | Return |  | Back / Return |
|  | Goto |  | Text / Goto |
|  | Zoom |  | Zoom / Size |
|  | Menu/PBC |  | Menu / Home |
|  | Angle |  | Info / Angle |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Audio |  | Audio / Lang I/II |
|  | 4 |  | 4 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------------------|
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Display |  | Display / Media |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | NTSC/PAL |  | Picture / Format |
|  | +10 |  | Guide / EPG / -/- |
|  | 0 |  | 0 |
|  | Sleep |  | Sleep / Timer |
|  | Mute |  | Mute / Dimmer |
|  | Setup |  | Setup / OPT / |
|  | Open/Close |  | Eject / Surround |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|---------------------------|
| | Down | | Down |
| | Stop | | Stop / Hold |
| | Play/Pause | | Play / Slow |
| | << | | << / Tune- |
| | Search | | >> / Tune+ |
| | St/Mo/Step | | Pause / Step / Freeze |
| | Volume+ | | Vol+ |
| | I<< | | I<< / Preset- |
| | Tuning- | | CH- / Page- |
| | >>I | | >>I / Preset+ |
| | Tuning+ | | CH+ / Page+ |
| | Memo/Slow | | Rec / Rec Mode |
| | Volume- | | Vol- |
| | Repeat | | Green / APP / Repeat |
| | A-B | | Yellow / YouTube / Repeat |
| | Prog | | TV/Radio / |
| | Select | | D.Menu / Top |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------|--|-----------------------|
| | Test Tone | | AV / Input / RDS |
| | Listening | | Shift + Sound / Title |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

