



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR+		CH+ / Page+
	0		0
	EPG		Guide / EPG / -/-
	Up		Up
	Left		Left
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	←PR		I<< / Preset-
	OK		OK
	Vol+		Vol+
	Right		Right
	Menu		Menu / Home
	PR-		CH- / Page-
	Down		Down
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	>>		>> / Tune+
	Info		Info / Angle
	SAT		Shift + 0
	Tv/Av		AV / Input / RDS
	Tv/Radio		TV/Radio /
	Exit		Exit / Cancel / Clear
	UHF		Display / Media
	Red		Red / Netflix / Search





Originalfernbedienung

Ersatzfernbedienung

	Audio		Audio / Lang I/II
	Green		Green / APP / Repeat
	Position		Picture / Format
	Yellow		Yellow / YouTube / Repeat
	[...]		Subtitle / EQ
	Blue		Blue / Prime Video / Random
	Audio L/R		Sound / Title

Originalfernbedienung

Ersatzfernbedienung

