


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	SAT		Shift + 0
	SAT		Smart / List
	Pause		Pause / Step / Freeze
	TV/Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0

Originalfernbedienung Ersatzfernbedienung

	Fav		Fav / Marker / PC
	Menu		Menu / Home
	Up / P+		CH+ / Page+
	Up / P+		Up
	Guide		Guide / EPG / -/-
	Left / V-		Vol-
	Left / V-		Left
	OK		OK
	Right / V+		Vol+
	Right / V+		Right
	Exit		Exit / Cancel / Clear
	Down / P-		Down
	Down / P-		CH- / Page-
	i		Info / Angle
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto





Originalfernbedienung Ersatzfernbedienung

M1	M1	SHIFT + TV 1	Shift + 1
M2	M2	SHIFT + DVD 2	Shift + 2
M3	M3	SHIFT + CD-STB 3	Shift + 3
F1	Red / F1	NETFLIX SEARCH	Red / Netflix / Search
F2	Green / F2	APP REPEAT	Green / APP / Repeat
F3	Yellow / F3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
F4	Blue / F4	Prime Video RANDOM	Blue / Prime Video / Random
UHF	UHF	OPT-TOOLS SETUP	Setup / OPT /
⏻	Timer	TIMER SLEEP	Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

