

 


 

 

 



 
 


 

 


 





Originalfernbedienung Ersatzfernbedienung

|   |              |   |                          |
|---|--------------|---|--------------------------|
|    | Power        |    | Power                    |
|    | V.Surround   |    | Shift + Eject / Surround |
|    | Repeat       |    | Green / APP / Repeat     |
|    | Open / Close |    | Eject / Surround         |
|    | Angle        |    | Info / Angle             |
|    | Audio        |    | Audio / Lang I/II        |
|    | Subtitle     |    | Subtitle / EQ            |
|    | On/Off       |    | Text / Goto              |
|    | Digest       |    | Smart / List             |
|    | Set Up       |    | Setup / OPT /            |
|    | Zoom         |    | Zoom / Size              |
|  | Title        |  | Sound / Title            |
|  | Up           |  | Up                       |
|  | Menu         |  | Menu / Home              |
|  | Left         |  | Left                     |
|  | Enter        |  | OK                       |
|  | Right        |  | Right                    |

Originalfernbedienung Ersatzfernbedienung

|   |                   |   |                       |
|---|-------------------|---|-----------------------|
|    | Display           |    | Display / Media       |
|    | Down              |    | Down                  |
|    | Return            |    | Back / Return         |
|    | << / Multi Speed- |    | << / Tune-            |
|    | Play              |    | Play / Slow           |
|    | >> / Multi        |    | >> / Tune+            |
|    | I<                |    | I<< / Preset-         |
|    | Pause             |    | Pause / Step / Freeze |
|    | Stop              |    | Stop / Hold           |
|    | >I                |    | >>I / Preset+         |
|    | 1                 |    | 1                     |
|  | 2                 |  | 2                     |
|  | 3                 |  | 3                     |
|  | Clear             |  | Exit / Cancel / Clear |
|  | 4                 |  | 4                     |
|  | 5                 |  | 5                     |
|  | 6                 |  | 6                     |





Originalfernbedienung Ersatzfernbedienung

|   |       |   |                   |
|---|-------|---|-------------------|
|  | 0     |  | 0                 |
|  | 7     |  | 7                 |
|  | 8     |  | 8                 |
|  | 9     |  | 9                 |
|  | Enter |  | Fav / Marker / PC |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |
|   |       |   |                   |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

