



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Main Speakers		Red / Netflix / Search
	Remote		Green / APP / Repeat
	Multi/Source		AV / Input / RDS
	Video 1		1
	Video 2		2
	Video 3		4
	Tape 1		5
	Source		Shift + Vol+
	Tape 2		8
	Tuner		6
	Phono		7
	CD		3
	Source Volume-		Shift + Vol-
	Pause Tape		Shift + Pause / Step /
	Play Tape		Shift + Play / Slow

Slow

Originalfernbedienung Ersatzfernbedienung

	Pause CD		Pause / Step / Freeze
	Play CD		Play / Slow
	Bank		Smart / List
	Rec Tape		Rec / Rec Mode
	Stop Tape		Shift + Stop /
	Disc CD		D.Menu / Top
	Stop CD		Stop / Hold
	Bank Up		CH+ / Page+
	<< Tape		<< / Tune-
	>> Tape		>> / Tune+
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Bank Down		CH- / Page-
	Mute		Mute / Dimmer
	Test		Text / Goto
	Rear Volume+		Right
	Center		Up

Volume+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Master		Vol+				
	Rear Volume-		Left				
	Center Volume-		Down				
	Master Volume-		Vol-				
	Mode		Picture / Format				
	Delay		Sound / Title				

