





 



 


 



 
















Originalfernbedienung Ersatzfernbedienung

| | |
|---|---|
|  Power / Standby |  Power |
|  TV / Radio |  TV/Radio / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Subtitle |  Subtitle / EQ |
|  Text |  Text / Goto |
|  Hold |  Shift + Stop / |
|  TVG |  Guide / EPG / -/-- |
|  Audio |  Audio / Lang I/II |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |
|  << / Size |  << / Tune- |
|  << / Size |  Zoom / Size |
|  >> / Subpage |  >> / Tune+ |
|  Rec |  Rec / Rec Mode |

Originalfernbedienung Ersatzfernbedienung

| | |
|---|--|
|  Stop |  Stop / Hold |
|  I<< / FAV |  I<< / Preset- |
|  I<< / FAV |  Fav / Marker / PC |
|  >>I / Index |  >>I / Preset+ |
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Aspect |  Picture / Format |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |



