





 

 








 







 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	ECO		Display / Media
	0		0
	EPG		Guide / EPG / -/-
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-




Originalfernbedienung Ersatzfernbedienung

	Smart Key		Shift + Smart / List
	CH-		CH- / Page-
	Info		Info / Angle
	Source		AV / Input / RDS
	Return		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left / Zoom-		Left
	OK		OK
	Right / Zoom+		Right
	Rec		Rec / Rec Mode
	Down		Down
	TimeShift		Sleep / Timer
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	List		Smart / List





Originalfernbedienung Ersatzfernbedienung

	Fav		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Lang		Shift + Blue / Prime
	Blue / Lang		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

