



 

 

 

 

 

 













 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Goto		Shift + Text /
	Step		Shift + Pause / Step /
	Prog		TV/Radio /
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9



 

 




















Originalfernbedienung Ersatzfernbedienung

	Zoom		Zoom / Size
	0/10		0
	10+		Guide / EPG / -/-
	A-B		Yellow / YouTube / Repeat
	OSD		Display / Media
	Repeat		Green / APP / Repeat
	Menu		Menu / Home
	Volume+		Vol+
	Angle		Info / Angle
	Video		Shift + 4
	Slow		Shift + Play /
	Volume-		Vol-
	Setup		Setup / OPT /
	Up		Up
	L/R		Text / Goto
	Left		Left
	Enter		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Down		Down
	N/P		Picture / Format
	Title		Sound / Title
	DVD/USB	 + 	Shift + 2
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung