





 

 







Originalfernbedienung Ersatzfernbedienung

	Auto PC		AV / Input / RDS
	Power		Power
	Menu		Menu / Home
	No Show		Stop / Hold
	Up		Up
	Left		Left
	Select		OK
	Right		Right
	Down		Down
	Lens Shift		Display / Media
	Image ADJ.		Setup / OPT /
	Zoom +		Vol+
	Focus +		CH+ / Page+
	Input 1		1
	Zoom -		Vol-
	Focus -		CH- / Page-
	Input 2		2

Originalfernbedienung Ersatzfernbedienung

	Freeze		Pause / Step / Freeze
	Digital Zoom		Zoom / Size
	Input 3		3
	P.Timer		Sleep / Timer
	Keystone		Smart / List
	Input 4		4
	Screen		Text / Goto
	Image SEL		Picture / Format
	Info		Info / Angle

