




 

 
 
 



 

 





 
 

 






 






Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Power		Power
	TV		TV/R
	-[/]-		Sleep
	[<>]		Format
	O)/		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AD		Shift + Subt

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Pre Ch
	Vol+		Vol +
	[i+]		Info
	P+		Ch +
	Vol-		Vol -
	Mute		Mute
	P-		Ch -
	Quick		Smart
	[.]		Shift + Options
	[>]		Options
	Text		Text
	List		List
	Menu		Menu
	↑ ↑		Shift + Up
	Guide		Guide
	Up		Up

 
 

 






Originalfernbedienung    Ersatzfernbedienung

	<<	 + 	Shift + Left
	Left		Left
	OK		Ok
	Right		Right
	>>	 + 	Shift + Right
	Back		Back
	Down		Down
	Exit		Exit
	↓↓	 + 	Shift + Down
	<</[≡+]		<<
	Play		Play
	>>/[≡◇]		>>
	I<</[≡?]		I<<
	Stop		Stop
	Pause/Step		Pause
	>>I/[O]/[≡x]		>>I
	Red		Red

Originalfernbedienung    Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

