










































 

 

 

 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Freeze	 Pause / Step / Freeze	Exit	 Exit / Cancel / Clear
East	 Rec / Rec Mode	Menu Down	 Down
Lang./Rewind	 Sound / Title	Back	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	TV	 Smart / List
Zoom	 Zoom / Size	CH/Page+	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Scan/Setup	 D.Menu / Top	Display	 Display / Media
Opt?	 Setup / OPT /	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1
TV/SAT	 AV / Input / RDS	2abc	 2
Menu	 Menu / Home	3def	 3
Menu Up	 Up	4ghi	 4
Info	 Info / Angle	5jkl	 5
Menu Left	 Left	6mno	 6



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
7pqrm	 7		
8tuv	 8		
9wxyz	 9		
Guide Pilote	 Guide / EPG / -/--		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
PWR On/Off	 +  Shift + Power		
Video	 +  Shift + 4		
Epg	 +  Shift + Guide / EPG / -/--		
App	 +  Shift + Green / APP /		

