


 




 



 


 

 

 

 

 

 

 

 

 









 


 


 









 


 
 
 

 


 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Info		Info
	TV SYS.		TV/R
	Browser		Green
	Copy		Yellow
	Music		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Repeat		Text
	Goto		Guide
	<<		<<
	>>		>>
	Vol -		Vol -
	Vol +		Vol +
	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Home		Smart
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Setup		Options
	Pause / Step		Pause
	Slow		Shift + Play
	A-B		Shift + Text
	Angle		Format
	Ins Replay		Shift + Left
	CM Skip		Shift + Right
	Zoom In		Shift + Up
	Zoom Out		Shift + Down
	Select		Sleep
	Confirm		Shift + Ok
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

