





 













 


 












 





 


 








 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung



















 



 




 
 


 


	9		9
	Menu		Menu / Home
	Help		Text / Goto
	0		0

Originalfernbedienung Ersatzfernbedienung














 
























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down






 


Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung







 













 













	9		9
	Menu		Menu / Home
	Help		Text / Goto
	0		0

Originalfernbedienung Ersatzfernbedienung



 





 


 








 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





 
 








 

 

















Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



 






 




 
 
 
 
 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



