

























 

























 



 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-----------------------------|
|  | Power |  | Power |
|  | Setup |  | Setup / OPT / |
|  | Disk |  | Yellow / YouTube / Repeat |
|  | Disk |  | Shift + 7 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | HDMI/AV |  | AV / Input / RDS |
|  | HDMI/AV |  | Blue / Prime Video / Random |
|  | HDMI/AV |  | Shift + 0 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Mute |  | Mute / Dimmer |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------------------------------|
|  | Edit |  | Fav / Marker / PC |
|  | Copy |  | Guide / EPG / -/- |
|  | Dir |  | Text / Goto |
|  | 0 |  | 0 |
|  | Movie |  | Smart / List |
|  | Music |  | Display / Media |
|  | Photo |  | Shift + Display / Media |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Repeat |  | Green / APP / Repeat |
|  | Pause |  | Pause / Step / Freeze |
|  | Step |  | Shift + Pause / Step / Freeze |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--------|-----------|------------|------------------------|
| REV | <</Rev | TUNE- | << / Tune- |
| PLAY | Play | SLOW | Play / Slow |
| PG. UP | I<</PG Up | PRESET- | I<< / Preset- |
| PG. UP | I<</PG Up | CH PAGE | CH+ / Page+ |
| FF | >>/FF | TUNE+ | >> / Tune+ |
| STOP | Stop | HOLD | Stop / Hold |
| PG. DN | >>/PG Dn | PRESET+ | >>I / Preset+ |
| PG. DN | >>/PG Dn | CH PAGE | CH- / Page- |
| AUDIO | Audio | LANG. I/II | Audio / Lang I/II |
| SUB-T | Sub-T | EQ | Subtitle / EQ |
| PSM | PSM | TOP MENU | D.Menu / Top |
| INFO | Info | ANGLE | Info / Angle |
| HOME | Home | HOME | Menu / Home |
| EXIT | Exit | CLEAR | Exit / Cancel / Clear |
| S.SHOW | S.Show | FORMAT | Picture / Format |
| DVD | DVD | NETFLIX | Red / Netflix / Search |
| DVD | DVD | SHIFT + 2 | Shift + 2 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

