







 

 

 

 









 



 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue/Timer |  | Blue / Prime Video / Random |
|  | Format |  | Picture / Format |
|  | Res. |  | D.Menu / Top |
|  | TTX |  | Text / Goto |
|  | S-T |  | Sound / Title |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------|
|  | Rec |  | Rec / Rec Mode |
|  | PVR List |  | Smart / List |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | EPG |  | Guide / EPG / -/-- |
|  | Down |  | Down |
|  | Info |  | Info / Angle |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Tv/Rad |  | TV/Radio / |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Audio |  | Audio / Lang I/II |



