


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Display		Info
	N/P		Pre Ch
	Open / Close		Eject
	Language		Dual
	Angle		Format
	Subtitle		Subt
	Prog		Sleep
	Key b		Ch -
	Key #		Ch +
	Return		Back
	View		3D
	Mute		Mute
	PDVD		Smart
	Time		AV
	Zoom		Shift + Eject
	Menu		Menu




 

 

 

















 
 

 

 
 


**Originalfernbedienung    Ersatzfernbedienung**

	Title		Media
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	PBC		Red
	A/B		TV/R
	Repeat		Text
	L/R		Green
	RAN		Yellow
	Volume+		Vol +
	Volume-		Vol -
	Step		Shift + Pause
	Resume		Shift + Stop
	1		1

 

 





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide
	Clear / EQ		Exit
	REV		<<
	FWD		>>
	Prev		I<<
	Next		>>I
	Stop		Stop
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Slow		Rec

