

 

 
 

 

 



 

 



 

 

 
 


 

 

 

 



 





 

 

 


 
 

 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	www		Display / Media
	e-mail		Smart / List
	YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+
	Home		Shift + Menu /
	Ch+		CH+ / Page+
	Vol-		Vol-
	Info		Info / Angle
	Ch-		CH- / Page-
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>>  / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Up		Up
	Check		Fav / Marker / PC
	Left		Left
	Ok		OK
	Right		Right
	Guide		Guide / EPG / -/--
	Down		Down
	Exit		Exit / Cancel / Clear
	Tv/Radio		TV/Radio /
	Search		Shift + Red / Netflix /
	Resolution		Subtitle / EQ
	Red/Sub-t		Red / Netflix / Search
	Green/Text		Green / APP / Repeat
	Text		Text / Goto



