



 
 

 







 





 

 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume Up		Vol +
	Volume Down		Vol -
	Sleep		Sleep
	Timer Standby		Shift + Power
	Band		Green
	Mono Tuner		TV/R
	Mode Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	CD		Yellow
	+10		Guide
	Tape		Blue
	Video1/DAT		Smart
	Video 2/AUX		Media
	DSP		3D
	PRGM/Test		Menu
	GEQ		Back
	Manual/Mode		Pre Ch
	Mute		Mute
	Volume Select		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Direct		Options





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
KARAOKE	Karaoke	AD SUBT	Subt				
AI FUNCTION	AI Function	REPEAT TEXT	Text				
T-BASS	T-Bass	TIMER AV	AV				
DOLBY PRO LOGIC	Dolby Pro Logic	PICTURE FORMAT	Format				
BBE	BBE	A	Red				
PRGM	PRGM Band	SHIFT + TOP MENU MENU	Shift + Menu				

 





 




Originalfernbedienung Ersatzfernbedienung








	Power		Power
	Volume Up		Vol +
	Volume Down		Vol -
	Mute		Mute
	Band		Green
	CD		Yellow
	Tape		Blue
	Video1/DAT		Smart
	Video2/AUX		Media
	Repeat		Text
	Random		AV
	Disc Skip		Info
	Disc Direct Play 1		Shift + 1
	Disc Direct Play 2		Shift + 2
	Disc Direct Play 3		Shift + 3
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	PRGM CD		Menu
	Play/Pause		Play
	Stop/Clear		Stop
	Search/Chk		>>
	I<<		I<<
	Edit AI		Format
	Edit PRGM		3D
	<> Deck 1		Pause

























 











 



 
 

 
 
 

 
 


 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Stop Deck 1	 +  Shift + Stop		
 >>/>>>I Deck 2	 >>>		
 << Deck2	 <<<		




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume Up		Vol +
	Volume Down		Vol -
	Mute		Mute
	Band		Green
	CD		Yellow
	Tape		Blue
	Video1/DAT		Smart
	Video2/AUX		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	+10		Guide
	PRGM DAT		Menu
	<> Deck 2		Play
	Stop Deck 2		Stop
	>> Deck 2		>>
	<< Deck 2		<<
	Rec/Rec Mute		Rec
	Pause		Pause

