



 
 



 

 

 

 






 




**Originalfernbedienung Ersatzfernbedienung**







	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	Right		Right
	I<<		I<< / Preset-
	>>I		>>I / Preset+

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	I>/Resume		Shift + Play /
	Surround		Eject / Surround
	Sound		Sound / Title
	Night		Shift + Sleep / Timer
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer
	DIM		Shift + Mute / Dimmer
	Subw +		Up
	Rear +		Shift + CH+ /
	Center +		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Subw -		Down



 









 

 

















 



 

 

 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Rear -	 +  Shift + CH- /		
 Center -	 CH- / Page-		
 Tv Vol-	 +  Shift + Vol-		










 





 

 

 
 
 








Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		I>/Resume		Shift + Play /
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Disc (DVD)		D.Menu / Top				
	0		0				
	Vol+		Vol+				
	System (DVD)		Menu / Home				
	Vol-		Vol-				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				





Originalfernbedienung    Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

Originalfernbedienung    Ersatzfernbedienung








Originalfernbedienung    Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung    Ersatzfernbedienung