



 






 


 

 
 
 

 



 

 





 





 





 
 

 
 



 











 

 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Guide		Guide / EPG / -/--
	3D		Shift + 3
	Smart Tv		Smart / List
	Home		Menu / Home
	Ambilight		Display / Media
	[<>]		Picture / Format
	TV		TV/Radio /
	OK		OK
	Up		Up
	Down		Down


 
**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Left		Left
	[i]/Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Back		Back / Return
	List		Shift + Smart / List
	Ill/Options		Setup / OPT /
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1





**Originalfernbedienung**    **Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Source		AV / Input / RDS

**Originalfernbedienung**    **Ersatzfernbedienung**