






 
















































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Timer		Sleep / Timer
	I-II		Audio / Lang I/II
	X		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Smart Sound		Sound / Title
	Smart Picture		Picture / Format
	[1 2]		Smart / List
	Menu		Menu / Home
	Text		Text / Goto
	Up		Up
	Left		Left
	Right		Right


Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info / Angle





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Fav / Marker / PC
[-O -]	

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

